



Important tools for installation:


- 1. Tape measure
- 2. Square
- 3. Utility knife
- 4. Seam roller
- 5. Hammer (to gently tap the scrap tapper)
- 6. Scrap Tapper (A tapping section cut across the width approximately 6" in length then split in the length direction to provide a tongue and groove "Scrap Tapper". This will provide equal contact when tapping along the length joint. This step is necessary to properly secure the length joint).

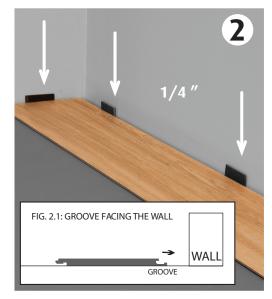


Choose your own starting position. Groove should face the wall (see detail fig. 2.1). Maintain ¼" expansion gap around all walls and vertical objects.

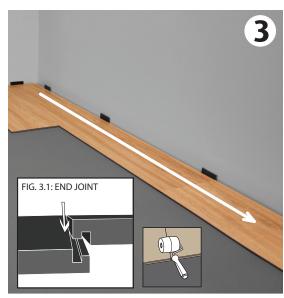


Click the short side of the plank vertically into the previous one by positioning it by hand followed by securing it rolling with a vinyl seam roller (See detail fig. 3.1). Continue to complete a straight starter row.

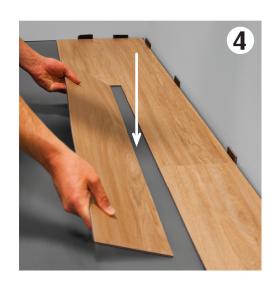

Place plank or tile with groove edge resting on the floor, angling the back edge slightly up approximately 4 to 5 inches.

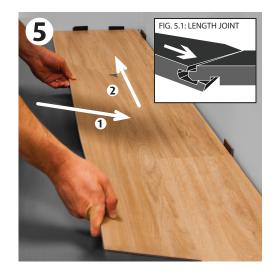

Second and all following rows: Slide the groove under the tongue and gently slide along the length until it aligns with the previous one (see detail fig. 5.1).

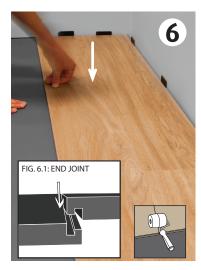

Position the short side of the plank vertically into the previous one with your hand followed by securing the joint using a seam roller



Once row is complete use the hammer to gently tap the scrap tapper to properly secure the length joint.

